



COPPA GUTTA

COPPER, ZINC AND STAINLESS STEEL RAINWATER SYSTEMS

FITTING INSTRUCTIONS

ROOF RIDGES

INSTALLATION GUIDE

The following instructions have been written to help you fit your copper ridges.

We have tried to show the basic points necessary to enable you to easily fit your copper ridge in the traditional manor, however some people opt to simply screw or chemically fix directly to the ridge tiles instead.

We recommend a minimum of 75mm overlap on your roof ridge joints, with a silicone sealant in-between.



Fig 1. Screw or nail the copper fixing straps to your roof tiles at approximately 400 - 600mm centres.



Fig 2. Sit the copper over your ridge and trim the straps so that approximately 20mm is left exposed.

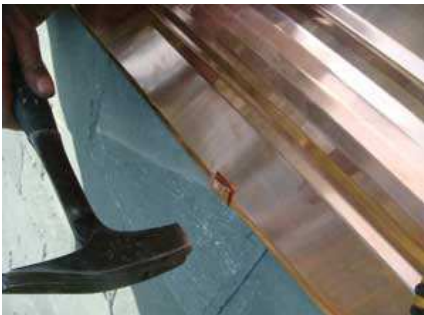


Fig 3. Bend the straps back over the edge of the roof ridge and tap down.



Fig 4. (step 4 & 5 optional) Drill through each strap and copper roof ridge.



Fig 5. Use copper pop rivets to secure the roof ridge to the straps.

Bespoke Design and Manufacture Service

We have been producing architectural features for over twenty five years and have been specialists in the production of easy to install copper components for twenty of those years.

With our in-house design and fabrication teams we are able to work on any project.

We offer a complete fabrication service to deliver a wide variety of sheet metal work and fabrication from one-offs to batch work and production runs whether it is architectural, structural or ornamental.



Contact Details

Coppa Gutta™ is a Trademark of Good Directions Ltd

Time House, Hillsons Road, Botley, Hampshire, SO30 2DY

Tel: 01489 797774 **Fax:** 01489 796700

Email: info@metal-guttering.co.uk **Web:** www.metal-guttering.co.uk